

YACHTING BOOKS
AN EXCLUSIVE SELECTION

PICTURE PRESENTATION



YACHT FOR SALE

2008 Pershing 50

52' • PERSHING • 2008



5

X

STKITTS NEVIS
BASSETERRE



5X
STKITTS NEVIS
BASSETERRE













DISPLAY REMAINS ACTIVE DURING GENERATOR OPERATION



⏪ ⏩ ⏴

KOHLER.
ADVANCED DIGITAL CONTROL

CODE	DEFINITION
AF	Auxiliary Fault
CC	Crank Cycle
HB	High Battery Voltage
HE	High Engine Temp
LB	Low Battery Voltage
LCL	Low Coolant Level
LOC	Loss of Coolant
LOP	Low Oil Pressure
OC	Over Crank
OF	Over Frequency
OS	Over Speed
OU	Over Voltage
UF	Under Frequency
UU	Under Voltage

OFF/RESET

RUN  AUTO

KOHLER.
KOHLER CO. KOHLER, WI, USA

MODEL 26P02D SERIAL 2173726
SPEC. 6MK007-0A1
K2: 50 RPM: 1500 FUEL: DIESEL

 
CONTINUOUS RATING BASED ON A MAXIMUM TEMPERATURE RISE AT RATED LOAD OF 100°C. ALTITUDE: 500 FT.
GENERATOR TYPE: ROTATING FIELD

	50 Hz	60 Hz
SINGLE PHASE 20C	9.00	8.00
SINGLE PHASE 50C		
THREE PHASE 20C		
THREE PHASE 50C		
VOLTAGE 20/NA	AMPS	P.F.
	20.00	1.0
INS. NEMA CLASS	H	BATT. 12 V

MATL: 1002D

In case of fire do not
remove shield (compa
Shut down gene
Continuously dis
contents of halon
fire extinguisher if
(or other provision

Fire



Automatic starting w
Can cause severe inj
Disconnect battery cable
working on generator set
negative (-) lead first when
disconnecting battery. Re
negative (-) lead last when
reconnecting battery.)

PRECAUTION















