

**YACHTING BOOKS**  
AN EXCLUSIVE SELECTION

PICTURE PRESENTATION



YACHT FOR SALE

# Pershing 50

50' • PERSHING • 2008





5



STKITTS NEVIS  
BASSETERRE

















DISPLAY REMAINS ACTIVE DURING GENERATOR OPERATION



⏪ ⏩ ⏴

**KOHLER.**  
ADVANCED DIGITAL CONTROL

CODE	DEFINITION
AF	Auxiliary Fault
CC	Crank Cycle
HB	High Battery Voltage
HE	High Engine Temp
LB	Low Battery Voltage
LCL	Low Coolant Level
LOC	Loss of Coolant
LOP	Low Oil Pressure
OC	Over Crank
OF	Over Frequency
OS	Over Speed
OU	Over Voltage
UF	Under Frequency
UU	Under Voltage

OFF/RESET

RUN  AUTO

**KOHLER.**  
KOHLER CO. KOHLER, WI. USA

MODEL 6EFOZD SERIAL 2173728  
SPEC. 01M30507-GA1  
HZ: 50 RPM: 1500 FUEL: DIESEL

CONTINUOUS RATING BASED ON A MAXIMUM TEMPERATURE RISE AT RATED LOAD OF 120°C. ALTITUDE: 500 FT.  
GENERATOR TYPE: ROTATING FIELD

WINDUP	500	1500
SINGLE PHASE 25C	0.00	0.00
SINGLE PHASE 50C		
THREE PHASE 25C		
THREE PHASE 50C		
VOLTAGE 230/NA	AMPS 30.00	P.F. 1.0
INS. NEMA CLASS H	BATT. 12	V

MATL: 10E0ZD

In case of fire do not remove fire extinguisher from fire shield (compare with manual for details)

Shut down generator immediately in case of fire.

Continuously discharge contents of halon fire extinguisher through fire shield (or other provision).

**Fire**

 **WARNING**



Automatic starting will engage when generator is running. Can cause severe injury if not properly used.

Disconnect battery cables when working on generator set. Disconnect positive (+) lead first when disconnecting battery. Reconnect negative (-) lead last when reconnecting battery.

**PERBCEL**



7500-250-00













